

# Product highlights ▼

- \* Linux operation system
- \* ARM cpu
- \* Digital signal and processor
- \* Continuous working 10000 hours above
- \* Energy saving design
- \* High penetration



## **Dimensional Drawing**

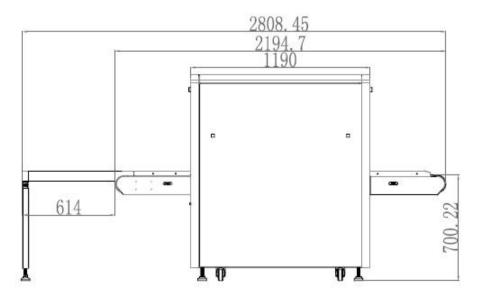

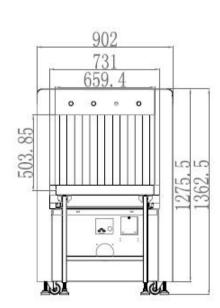

## **Important Sizes:**

Product Size: 2808.45\* 902 \*1362.5mm (L  $\times$  W  $\times$  H) Tunnel Size: 659.4\* 503.85mm (width  $\times$  height)





### **General Specifications**

Wire Resolution Typical AWG 40 Penetration resolution Typical AWG32

Spatial resolution Vertical: 1.0mm, horizontal: 1.0mm

Penetration Typical 30mm Resolution of organic matter 1-120mm Grayscale and mixture resolution 1-40mm Resolution of inorganic objects 0.2-14mm

Effective material resolution Meet the requirements of GB15208.1-2005

≤2.5µSv (uGy) X-Ray dosage each inspection  $\leq 0.5 \mu Sv /h(uGy/h)$ Boundary Leakage

<60dB S/N ratio 0.2m/s Conveyor speed 180kg Conveyor max load 0.5KW Power consumption

Meet the requirements of GB15208.1-2005 Safety performance requirements

Meet the requirements of GB15208.1-2005 **EMC** requirements

Meet the requirements of GB15208.1-2005 Electrical safety Meet the requirements of GB15208.1-2005 Environmental applicability

≤5.0mA Leakage current

Guarantee ASA/ISO1600 Film Film Safety

450kg Weight

Operation temperature/Humidity 5℃-40℃/0%-90% Storage temperature/Humidity -20℃-60℃ /10%-90% Atmospheric pressure 86kPa-106kPaAC

**Operation Power** 220V(±10%-15%)50±3Hz

Operation system LINUX

#### **General Specifications**

X ray generator 140KV, oil cooling, from bottom to top

Electric roller One-phase

Computer Hard drive: 500G, Storage: 1G

21.5" LED screen, resolution: 1280\*1024 pixels Monnitor

Single screen console Operation console

## **Scanned images**









#### Functional characteristics

Ray source setting

Power-on self-test With the function of fault self-check, automatically judge the fault and prompt the fault code information in time.

Image processing With the function of Color/BW, negative, high/low penetration, organic/inorganic stripping,

general enhancement, and pseudo color, etc.

Image Recall 30 preceding images recallable.

The number of images stored Up to 10,00 images stored automatically.

Real-time curve The real-time curve can be used to detect whether the acquisition system and components work normally.

System time can be set Time setting

It can realize the manual deletion of the low and low energy detection board dead pixels, Probe setting

and display the deleted dead pixels in the display area.

The alarm function can be activated and deactivated, and the alarm type of the alarm box, Alarm system

sound and light alarm can be selected, and the sensitivity, minimum absorption rate,

maximum absorption rate, and alarm duration can be set.

It can realize whether the components such as the entrance and exit light barrier, side panel switch, emergency Troubleshooting

stop switch and light source are normal, and display the standard value and current value of the detection voltage

There are two source and analog source control modes, the source parameters of the digital source can be set.

The drum running control direction and the image display moving direction can be set. Image setting

It can realize software registration function and has serial number, registration code, Software registration

registration status and system time information display.

User login Log in by entering different user name and passwords, only when logging in can you make other settings.

User management You can add, delete, edit the user name and password, set the user level to restore the deleted user.

Authority management Different default permissions can be set according to user level.

language settings The system language can be set to switch between Chinese and English.

Log management User operations can be monitored to query user actions.

About The version and device number can be displayed.

TIP report The report can be generated by the tip operation after the tip insertion function is turned on, and the

content of the report: user name, number of tip insertions, number of tags, false positive rate,

probability of detection, probability of false positives.

Tip management It can be set to enable and disable the insertion of dangerous goods, and can set the identification time,

Prompt time, insertion frequency, proportion of single items inserted into dangerous goods, add tip files

and delete files.

Document management It can query, open, and export the checked image.

Function setting It can set log level, save the file time, whether to open the training function and setting the smart roller.

Data setting Display system working hours, the total working hours of the ray source, the total number of system

baggage and packages, and the total number of baggage packages this time, and clear the above data.

System parameter setting It can select the exported data, pictures, and backup directory, select and adjust the motor type, detector

type, whether to enable the debug mode, model, and gain, enter the corresponding IP address on network

connection to realize sharing function, and have corresponding software to achieve system upgrade.

Compliance

\*ISO19001; SO14001; ISO27001; OHSMS18001; CE, ROHS, FCC, REACH, USA, FDA

International \*Health Inspection Report

\*Computer Software Copyright Registration Certificate National (China)

\*Software Product Registration Certificate

\*Radiation Safety Certificate from Ministry of Public Security

\*Quality Certification from Safety and Police Electronic Products Quality Inspection Center

\*Design pantent certification

#### SAFEWAY INSPECTION SYSTEM LIMITED

First Factory: BuildingA, QiFeng Digital Park, BaiNiKeng, PingHu Street, LongGang, Shenzhen, China Second Factory: Building B. ShengLongXing Industrial Park, LongTeng Road, PingDi Street, LongGang, Shenzhen, China Tel: +86 - 755-8934 2235 / Fax: +86 - 755-8934 2650

Mobile&Whatsapp: + 86- 136 7021 3490 Skype: sophia.xiong8105

Email: sophia@safeway-system.com Website: www.safeway-system.com

